



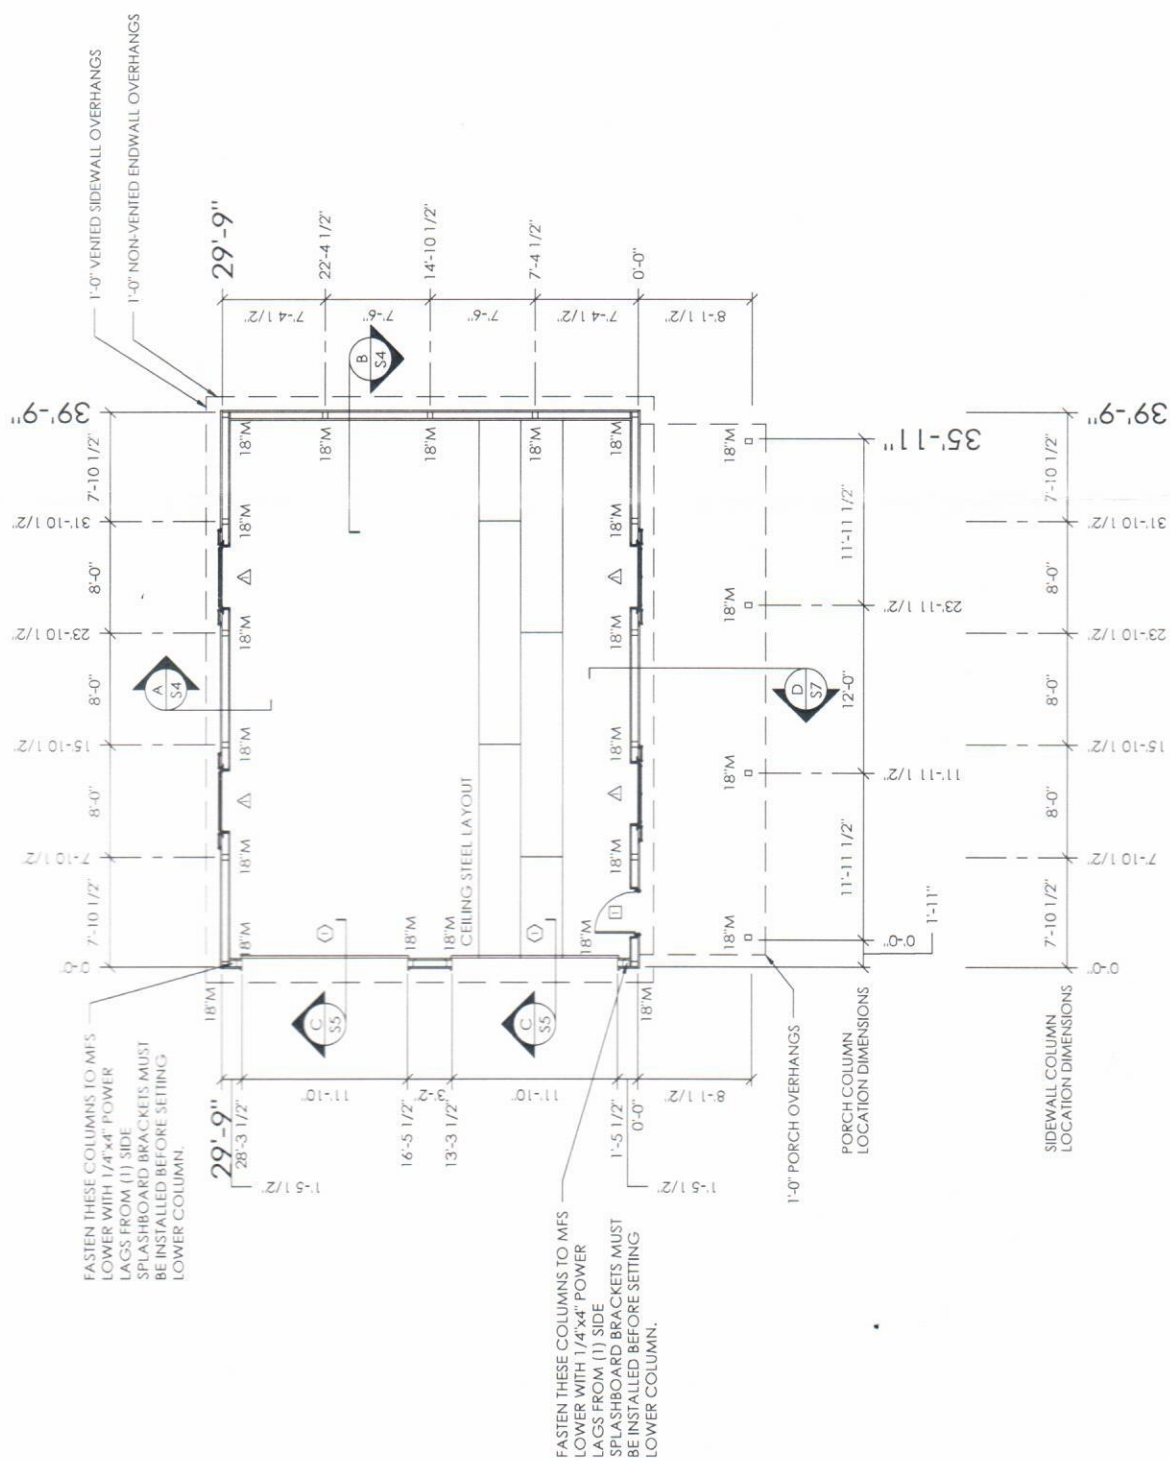


COLUMN PLAN

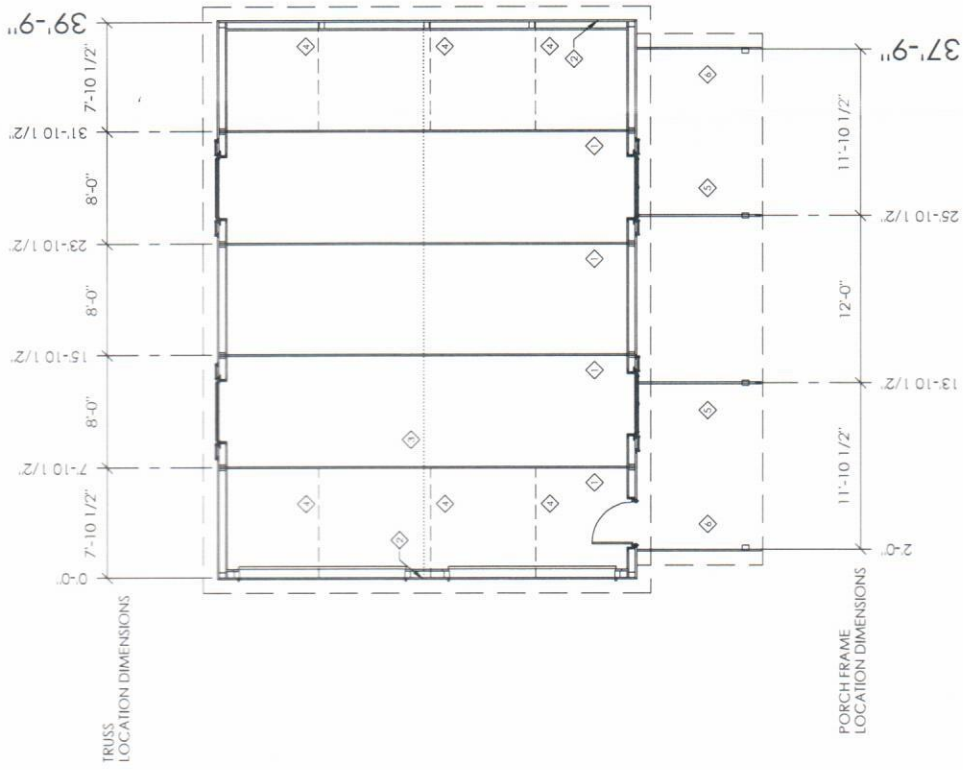


TRUSS/BRACING PLAN



NOR

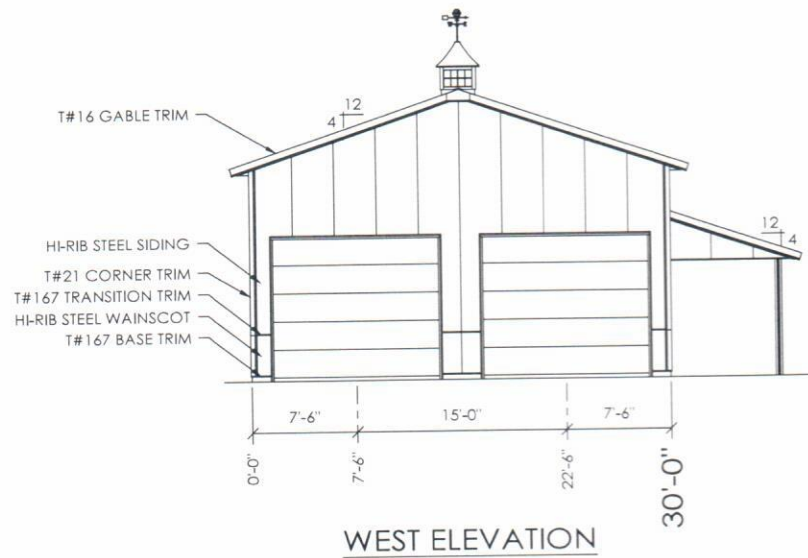


WEST ELEVATION

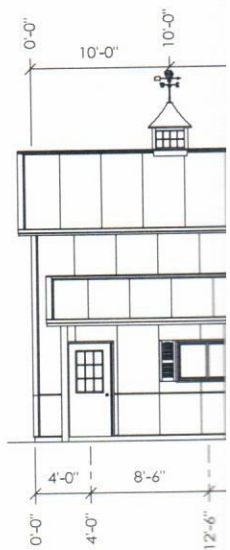


SO

DESIGN AND EXPLANATORY NOTES


1.) EXTERIOR DOOR AND WINDOW LOCATIONS ARE TAKEN FROM THE EXTERIOR FACE OF THE NAILERS AND ARE TO THE CENTER OF THE DOOR AND WINDOW UNITS. VERIFY ALL DOOR AND WINDOW LOCATIONS WITH THE OWNER.

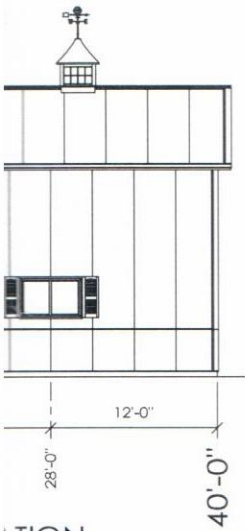

ATION

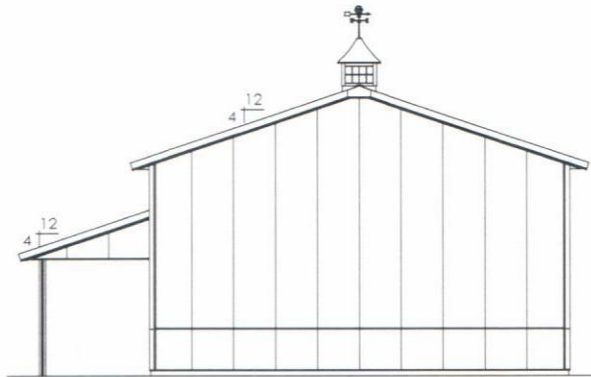

EAST ELEVATION

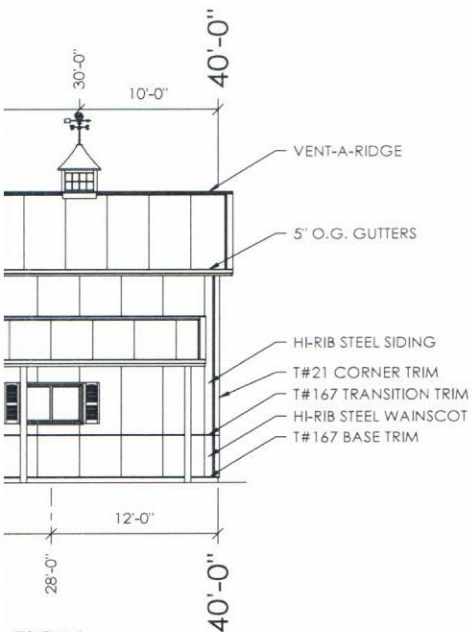

ATION



OFFICE:
MEXICO, MO

JOB NO.
036-133747

DAVID CABRAL

MEXICO, MO



MORTON BUILDINGS, INC.

309-263-7474

MORTON, IL 61550-0399

P.O. BOX 399


© MORTON BUILDINGS, INC.



DRAWN BY:	HBH
DATE:	5/31/2024
CHECKED BY:	JG
DATE:	6/6/2024
REVISED DATE:	----
REVISED DATE:	----
REVISED DATE:	----
REVISED DATE:	----

SCALE: AS NOTED

SHEET NO: S3 OF: S7

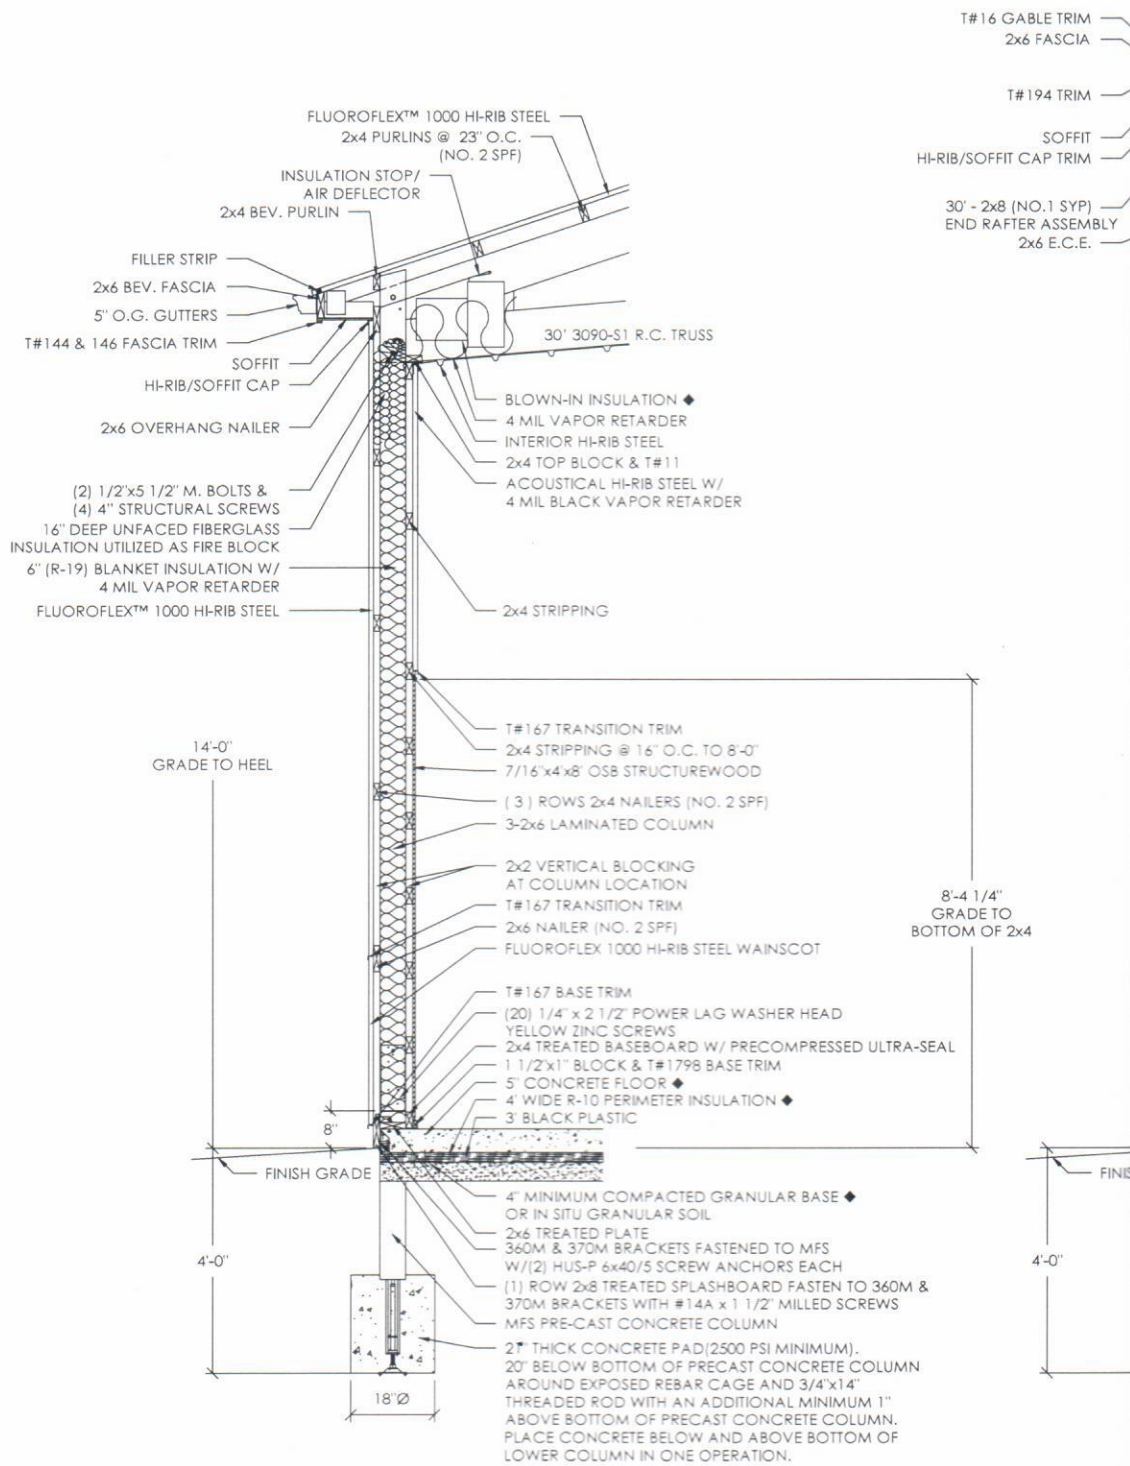


SIDEWALL SECTION A

SCALE: 1/2" = 1'-0"

DESIGN AND EXPLANATORY NOTES

1.) ♦ THE PRECEDING SYMBOL IDENTIFIES ITEMS THROUGHOUT THE PLANS THAT ARE NOT PROVIDED BY MORTON BUILDINGS, INC. OR MORTON BUILDINGS' SUBCONTRACTORS AND ARE THE OWNER'S RESPONSIBILITY.

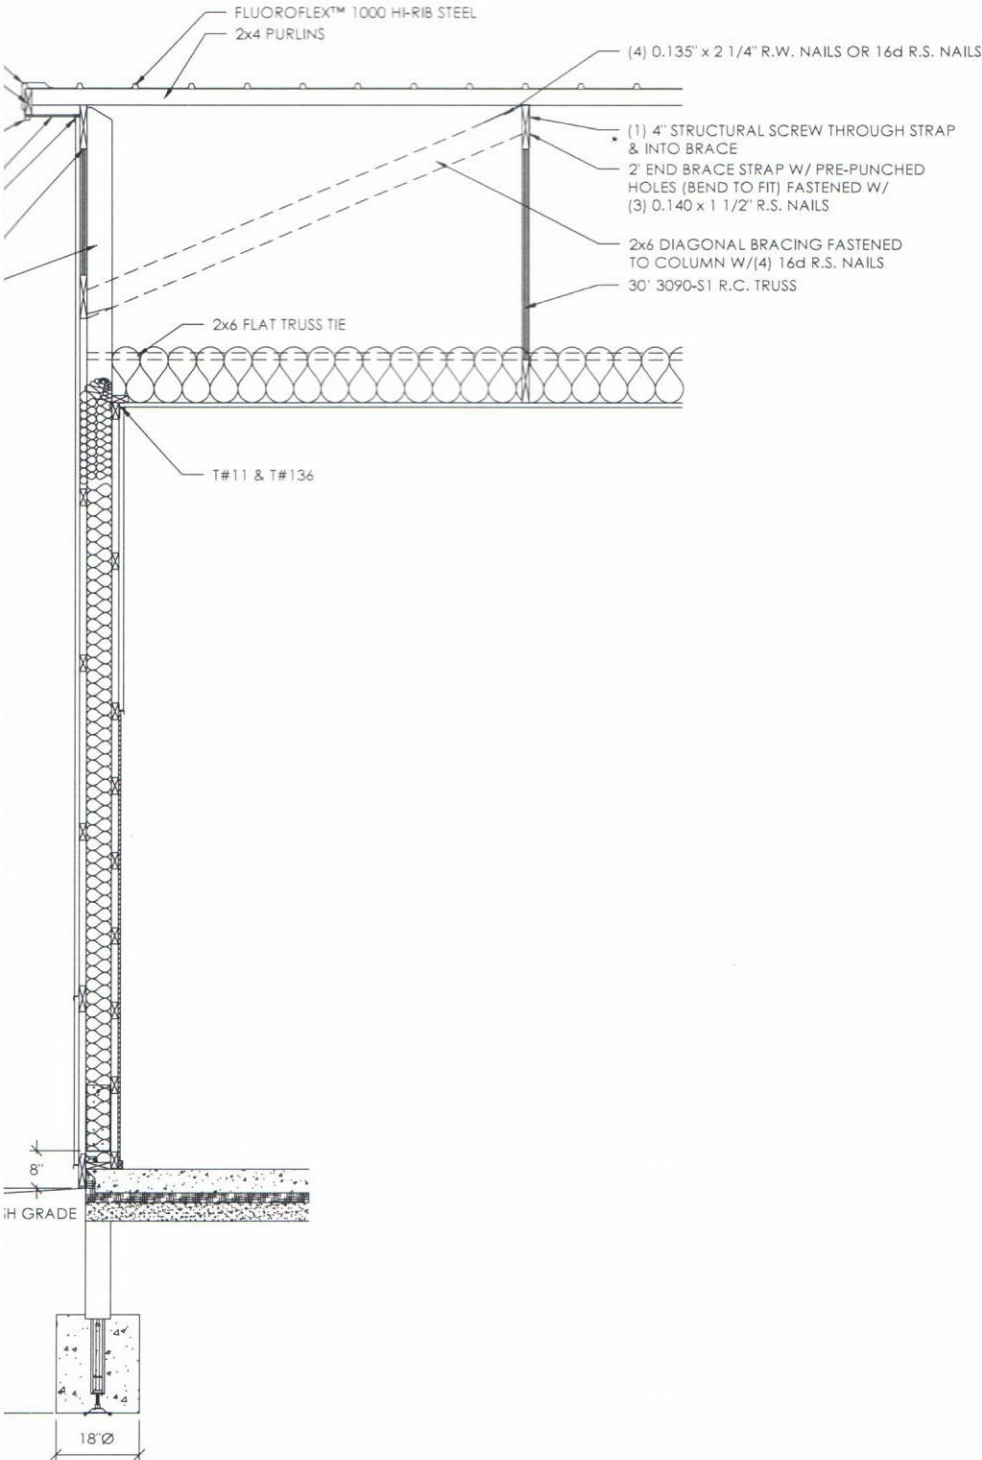

ENDWALL SECTION B

SCALE: 1/2" = 1'-0"

OFFICE:
MEXICO, MO

JOB NO.
036-133747

DAVID CABRAL

MEXICO, MO



MORTON BUILDINGS, INC.



309-263-7474

MORTON, IL 61550-0399

P.O. BOX 399

© MORTON BUILDINGS, INC.

DRAWN BY:	HBH
DATE:	5/31/2024
CHECKED BY:	JG
DATE:	6/6/2024
REVISED DATE:	----
REVISED DATE:	----
REVISED DATE:	----
REVISED DATE:	----

SCALE: AS NOTED

SHEET NO: S4 OF: S7


NOTE: STOP ALL NAILERS AT 2x6 TRACK BLOCK OVERHEAD DOOR AREA.

STEP 1: INSTALL T#11 TO CEILING (NOT SHC SCREWS 2' O.C.)

STEP 2: CUT FLAT STEEL TO HEADER HEIGHT O.C. AT TOP & BOTTOM.

STEP 3: NOTCH T#105 JAMB TRIM FOR HEA PROCEDURE.

STEP 4: INSTALL T#11 OVER T#105 FOR H-R PROCEDURE.

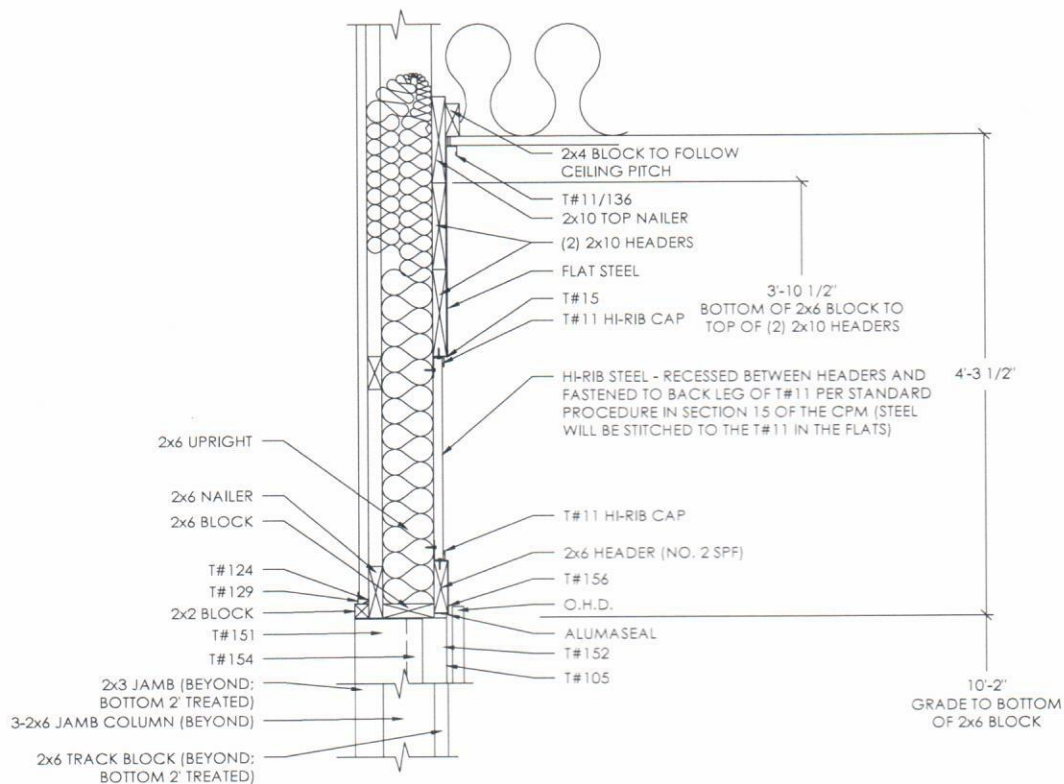

OHD HEADER SECTION C

SCALE: 1" = 1'-0"

E.P. OHD HI-LIFT TRACK JAMB DETAIL


K. DO NOT RUN NAILERS ABOVE

N) WITH #9x1" WHITE HWH

, FASTEN WITH 1-1/2" R.S. NAILS, 2'



RS & INSTALL PER STANDARD

STEEL LINER PER STANDARD

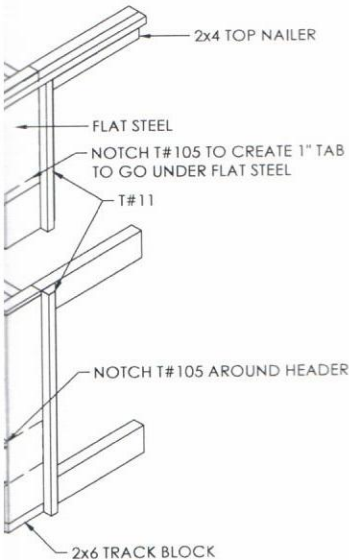


STEP 5: INSTALL T#156 OVER BOTTOM HEADER & T#15 ON BOTTOM OF TOP HEADER (SEE DETAIL BELOW) WITH 1-1/2" R.S. NAILS, (3) PER PIECE.

STEP 6: INSTALL T#11 WITH #9x1 HWH SCREWS.

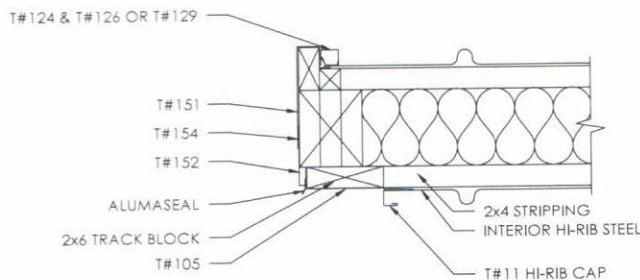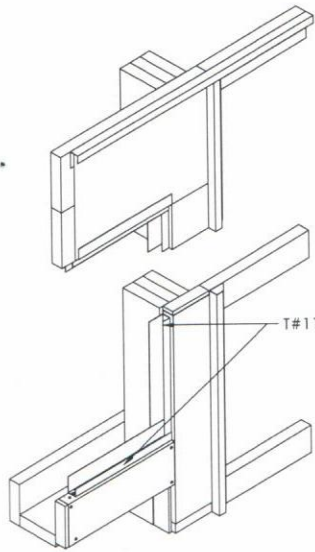

OHD W/ HI-LIFT TRACK JAMB DETAIL

(FLASHING DETAIL AT OPENING)

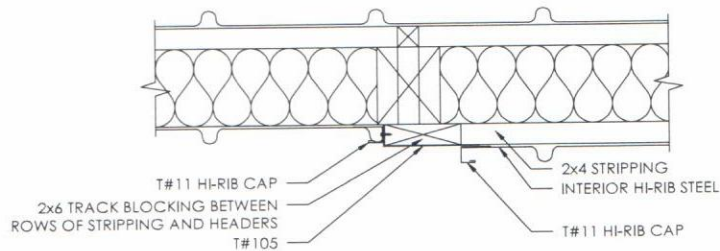

OHD W/ HI-LIFT TRACK JAMB DETAIL

(FLASHING DETAIL ABOVE OPENING)

OFFICE: MEXICO, MO

JOB NO. 036-133747

DAVID CABRAL

MEXICO, MO



MORTON BUILDINGS, INC.

309-263-7474

MORTON, IL 61550-0399

P.O. BOX 399

© MORTON BUILDINGS, INC.



DRAWN BY: HBH

DATE: 5/31/2024

CHECKED BY: JG

DATE: 6/6/2024

REVISED DATE: ---

REVISED DATE: ---

REVISED DATE: ---


REVISED DATE: ---


SCALE: AS NOTED

SHEET NO: S5

OF: S7

NOTE:
STUB COLUMN OR UPRIGHT
AS REQUIRED HAS BEEN
OMITTED FOR CLARITY

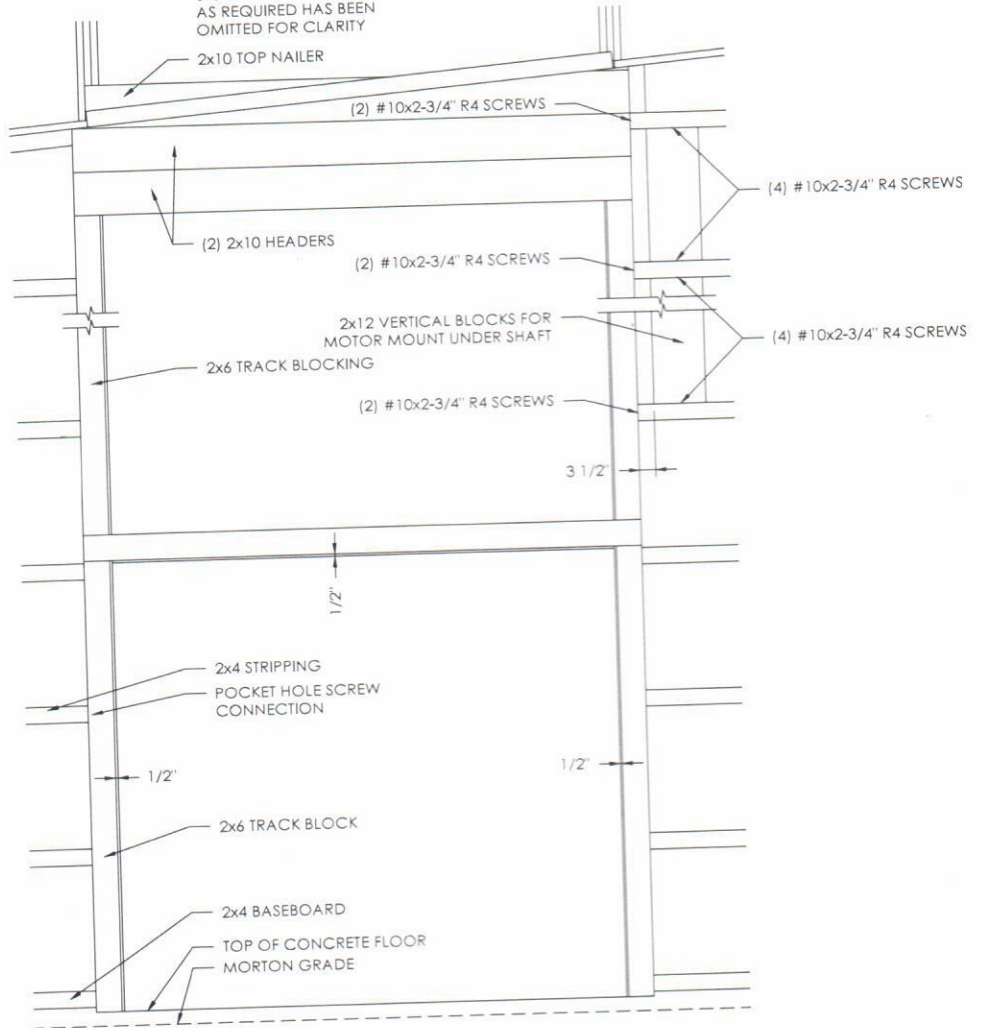

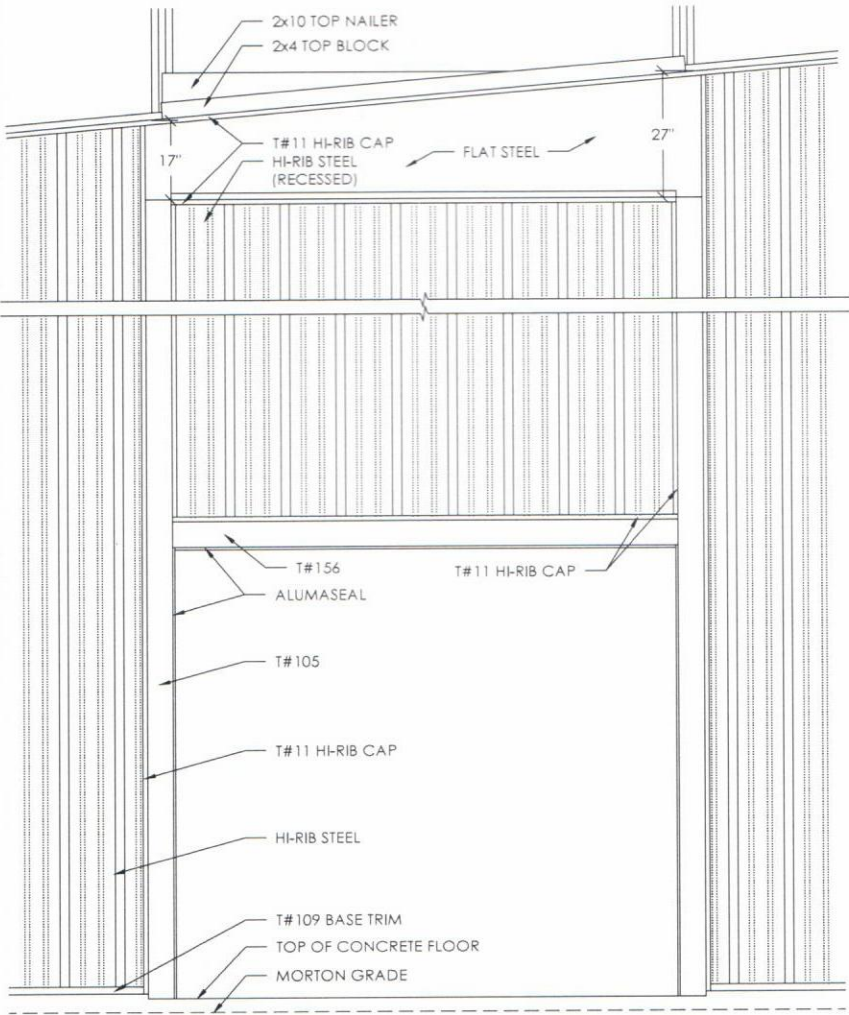

OFFICE:
MEXICO, MO

JOB NO.
036-133747

DAVID CABRAL
MEXICO, MO



MORTON BUILDINGS, INC.
309-263-7474
MORTON, IL 61550-0399
P.O. BOX 399

DRAWN BY:	HBH
DATE:	5/31/2024
CHECKED BY:	JG
DATE:	6/6/2024
REVISED DATE:	----
REVISED DATE:	----
REVISED DATE:	----
REVISED DATE:	----



SCALE: AS NOTED

SHEET NO: **S6** OF: **S7**

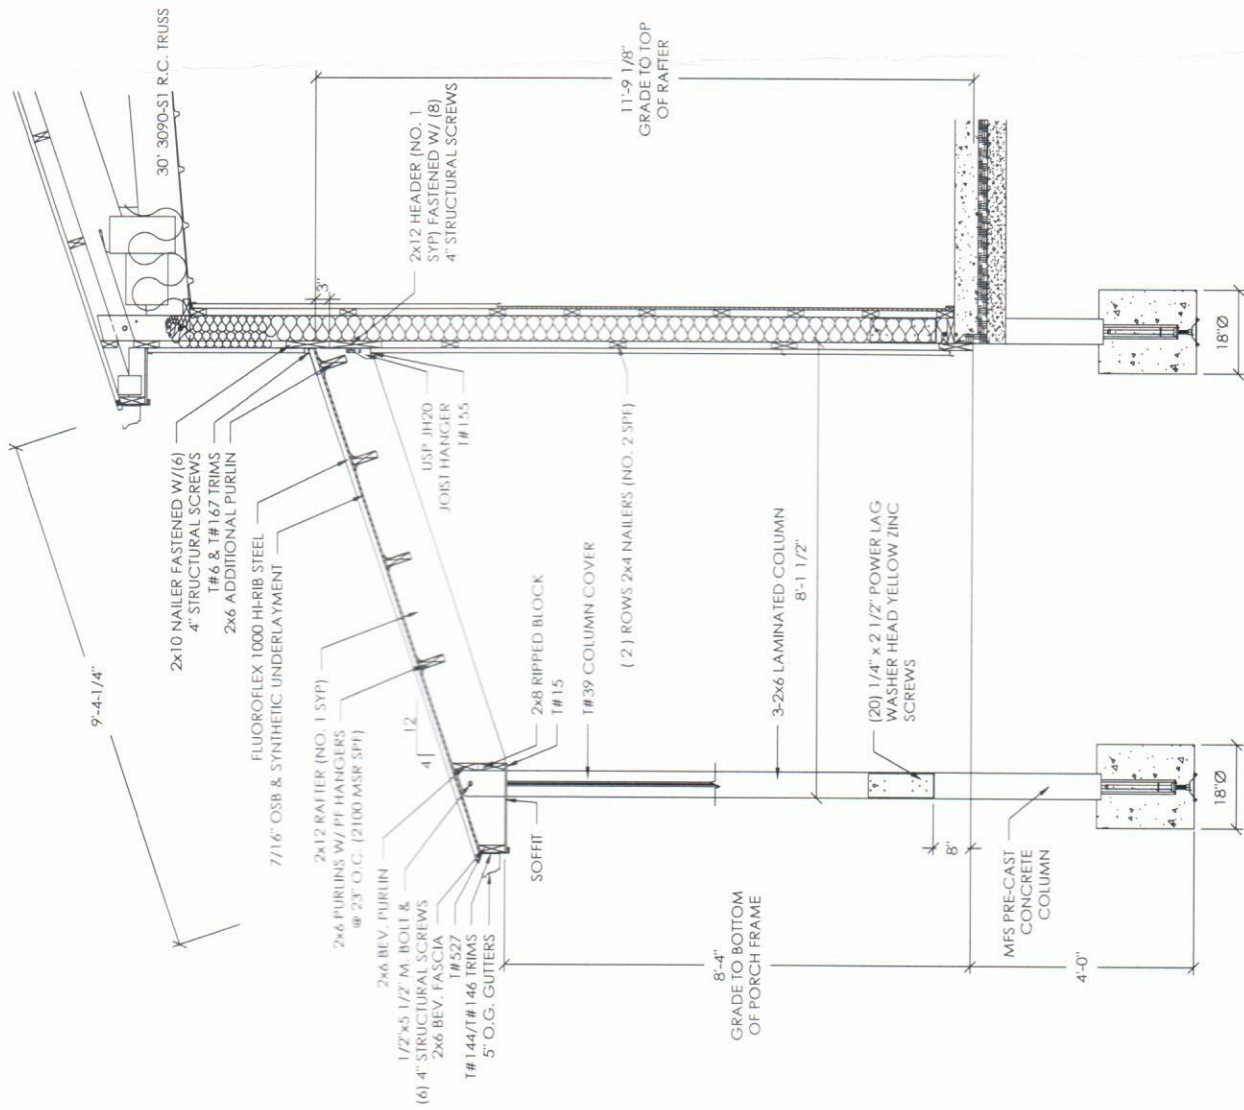

8' PORCH SECTION D

SCALE: 1/2" = 1'-0"